



## Assembly Instructions

### ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ





ΑΠΟΘΗΚΗ ΚΗΠΟΥ 300 x 300  
SHED 300 x 300

## Packing List - Λίστα υλικών Shed 300x300


Item / είδος	Description	Περιγραφή	Size (cm) / Μέγεθος	Quantity / Ποσότητα
A	Floor	Πάτωμα	100x300	3
B	Back wall	Πάνελ/πλευρά πίσω όψης	97,5x200	8
C,	Side wall with window	πλευρά με παράθυρο	97,5x200	4
D	Front wall	Πάνελ/πλευρά πρόσοψης	66,7 x 200	2
E	Back/front wall	Πάνελ/πλευρά πίσω όψης	40x300	2
F,F <sub>1</sub>	Roof	Οροφή	85x165	8
G	Lath finishing	Τάβλα κάλυψης	9,5x172	4
H	Lath finishing	Τάβλα κάλυψης	9,5x200	6
I	Lath finishing corner	Τάβλα κάλυψης	9,5x200	4
J	Lath flooring	Πηχάκι πατώματος	4,4x300	4
K	Roof element	Τρίγωνο οροφής	40x292	3
L	Window	Παράθυρο	57x57	1
M	Door	Θύρα	81x199	2
N	Roof element	Τρίγωνο οροφής	100x330	4

## Fixings - Μεταλλικά μέρη


Drawing	Description	Περιγραφή	Size (mm) / Μέγεθος	Quantity / Ποσότητα
	Screws	Βίδες	4x20	18
	Screws	Βίδες	4x30	54
	Screws	Βίδες	4x50	64
	Screws	Βίδες	4,5x70	145
	Roofing nails	Καρφια ασφαλτικού	20	128
	Hasp	Κλειδαριά	100	1
	Hasp	Κλειδαριά	70	2
	Hinges	Μεντεσές	125	6

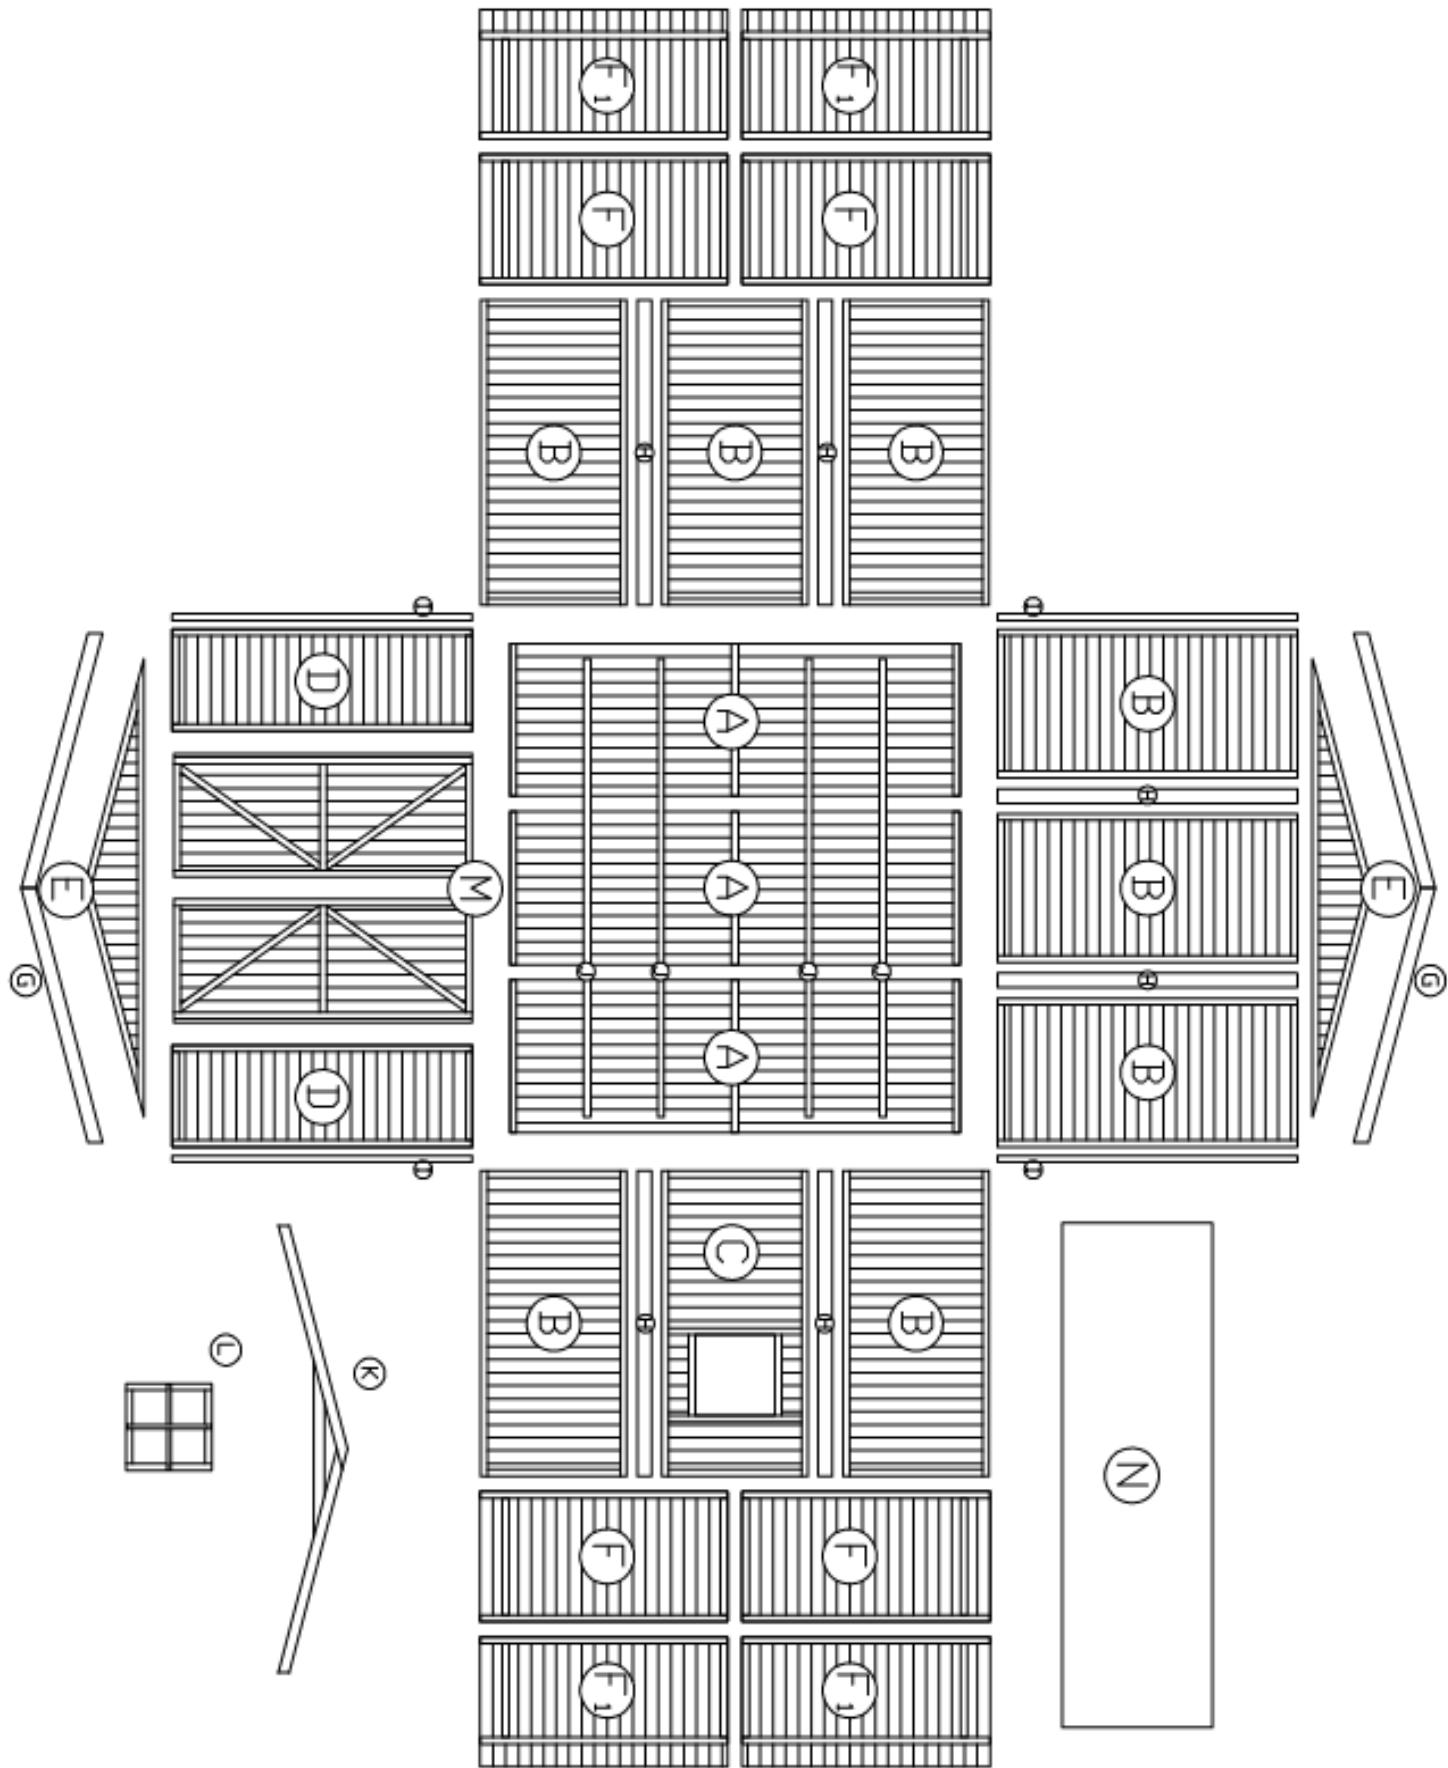

1. place 4 elements ( J ) under 3 floor elements ( A ) and fasten each element with 4 x 30 mm screws as shown in the picture

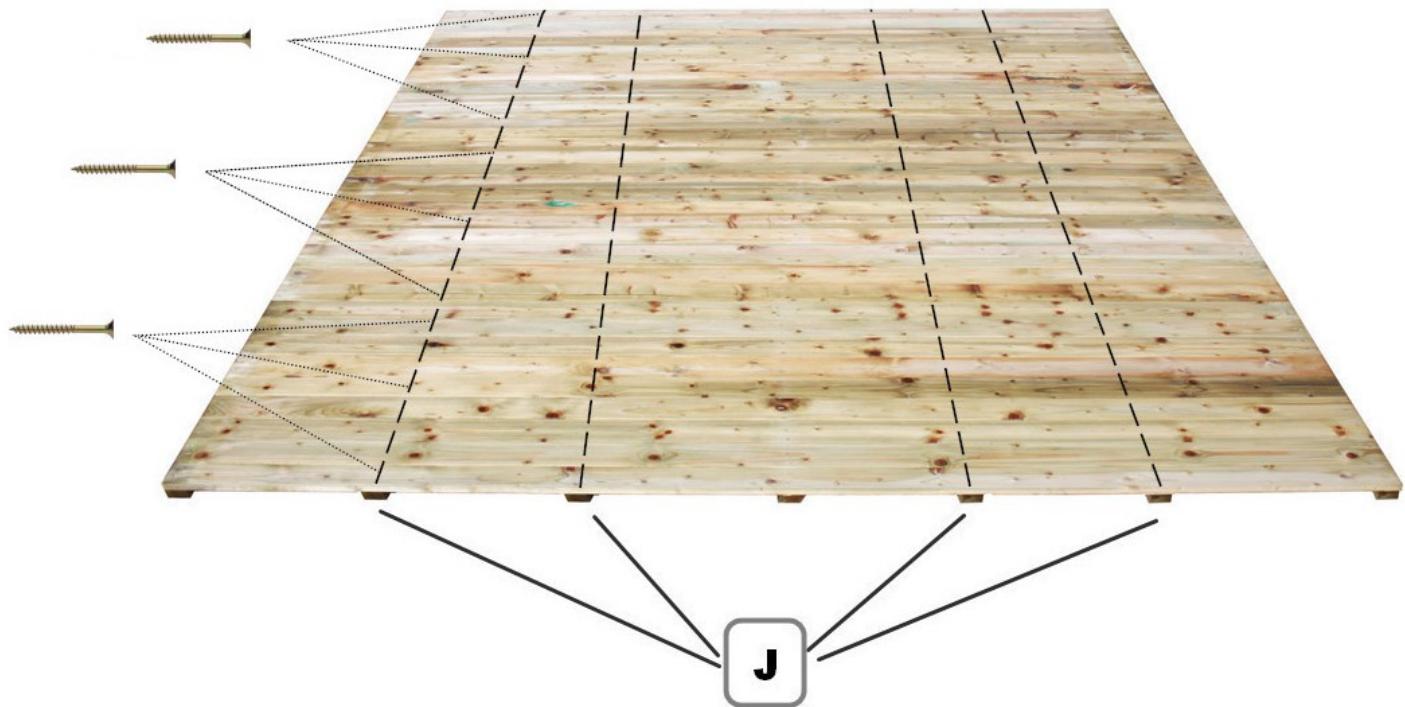


2. mount the wall panels (B) + (C) + (D) + (I) to the assembled floor using 4.5 x 70 screws

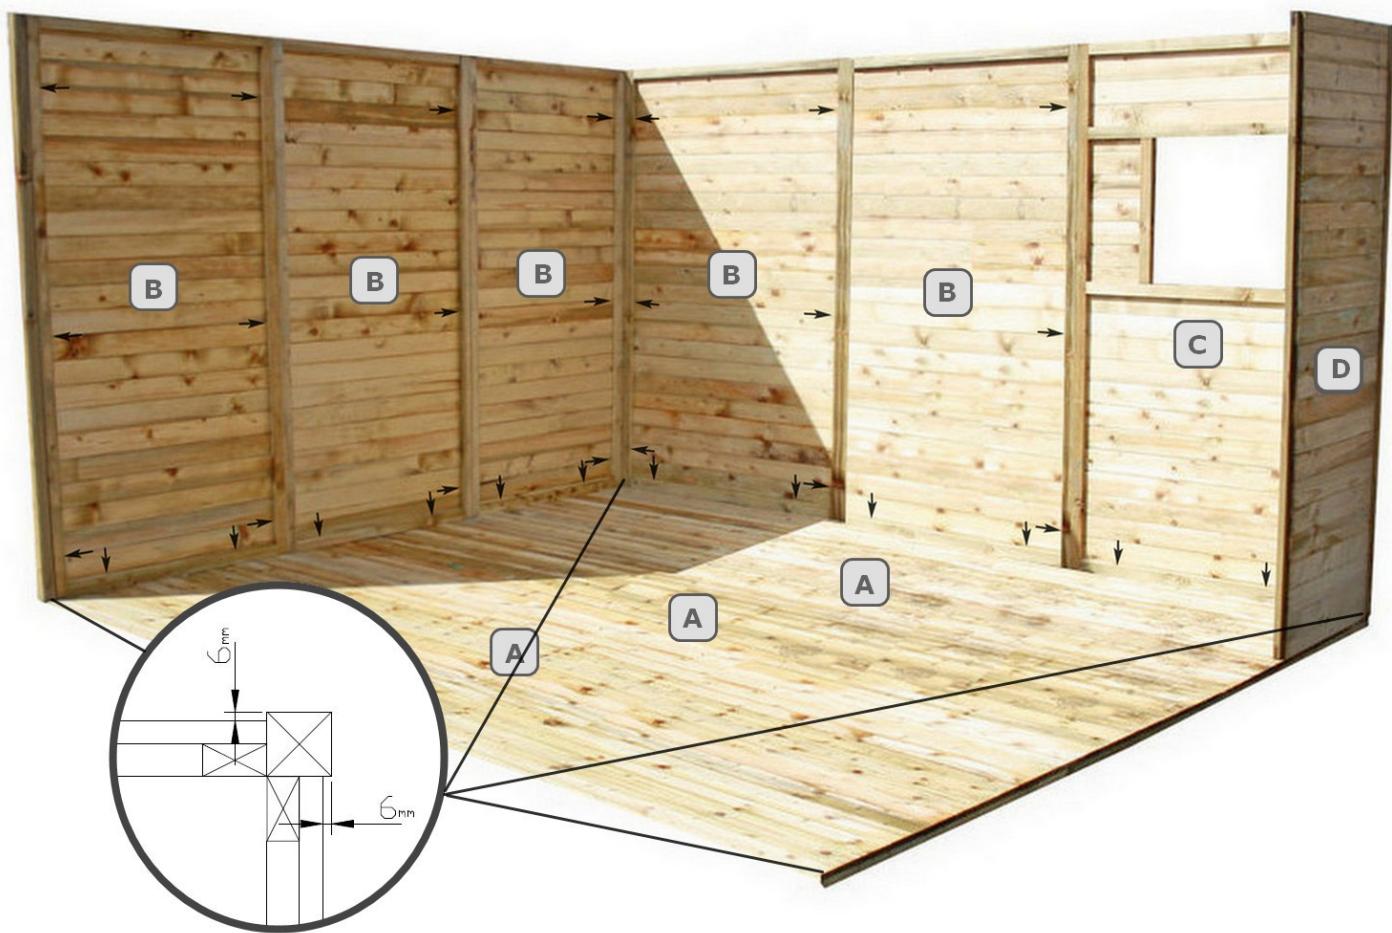

3. all walls should be assembled as described in point 2 with 4.5 x 70 screws



4. the next step is the assembly of roof trusses: elements (E) are mounted on the front and rear walls of the house, screwed on from the bottom with 4.5 x 70 mm screws. Then, in the underside of the side walls, mount the first element (K) inwards, screwing it from the outside with 4.5 x 70 mm screws. The last stop is the installation of the other two trusses (K) which are mounted at a distance of 100 cm from the outer wall using 4.5 x 70 mm screws

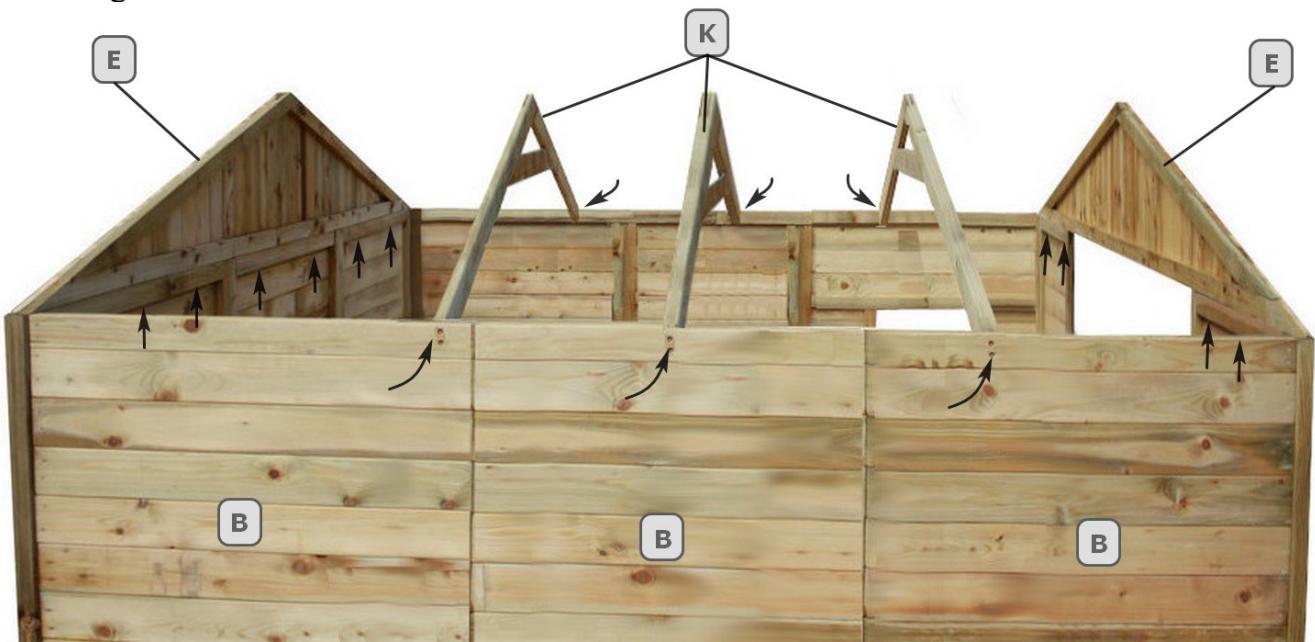

5. we proceed to the assembly of the roofs: we start with the internal roofs (F) which we assemble on the trusses by aligning the roof battens with the wall using 4.5 x 70 mm screws. Then we assemble the outer roof on the slope of the house in the same way as above.



6. the last stage is the assembly of the door ( M ) using ZT 125 hinges and 4 x 20 mm screws, masking panels ( H ) are installed in the places where the walls connect with 4 x 50 mm screws, wind girders ( G ) are installed using 4 x 50 mm screws and a window ( L ) mount using 4 x 50 mm screws

