



Assembly Instructions

ΟΔΗΓΙΕΣ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ






ΑΠΟΘΗΚΗ ΚΗΠΟΥ 300 x 240
SHED 300 x 240

Packing List - Λίστα υλικών Shed 300x240


No	Item / είδος	Description	Περιγραφή	Size (cm) / Μέγεθος	Quantity / Ποσότητα
1	A	Floor	Πάτωμα	100x240	3
2	B	Back wall	Πάνελ/πλευρά πίσω όψης	97,5x200	3
3	C, C1	Side wall, side wall with window	Πάνελ / πλευρά με παράθυρο	116x200	4
4	D	Front wall	Πάνελ/πλευρά πρόσοψης	66,7 x 200	2
5	E	Back/front wall	Πάνελ/πλευρά πίσω όψης	40x300	2
6	F, F ₁	Roof	Οροφή	85x270	4
7	G	Lath finishing	Τάβλα κάλυψης	9,5x172	4
8	H	Lath finishing	Τάβλα κάλυψης	9,5x200	4
9	I	Lath finishing corner	Τάβλα κάλυψης	9,5x200	4
10	J	Lath flooring	Πηχάκι πατώματος	4,4x300	2
11	K	Roof element	Τρίγωνο οροφής	40x292	2
12	L	Window	Παράθυρο	57x57	1
13	M	Door	Θύρα	81x199	2
14	N	Roof element	Τρίγωνο οροφής	100x330	4

Fixings - Μεταλλικά μέρη


No	Drawing	Description	Περιγραφή	Size (mm) / Μέγεθος	Quantity / Ποσότητα
1		Screws	Βίδες	4x20	18
		Screws	Βίδες	4x30	54
2		Screws	Βίδες	4x50	48
3		Screws	Βίδες	4,5x70	115
5		Roofing nails	Καρφια ασφαλτικού	20	128
8		Hasp	Κλειδαριά	100	1
8		Hasp	Κλειδαριά	70	2
9		Hinges	Μεντεσές	125	6

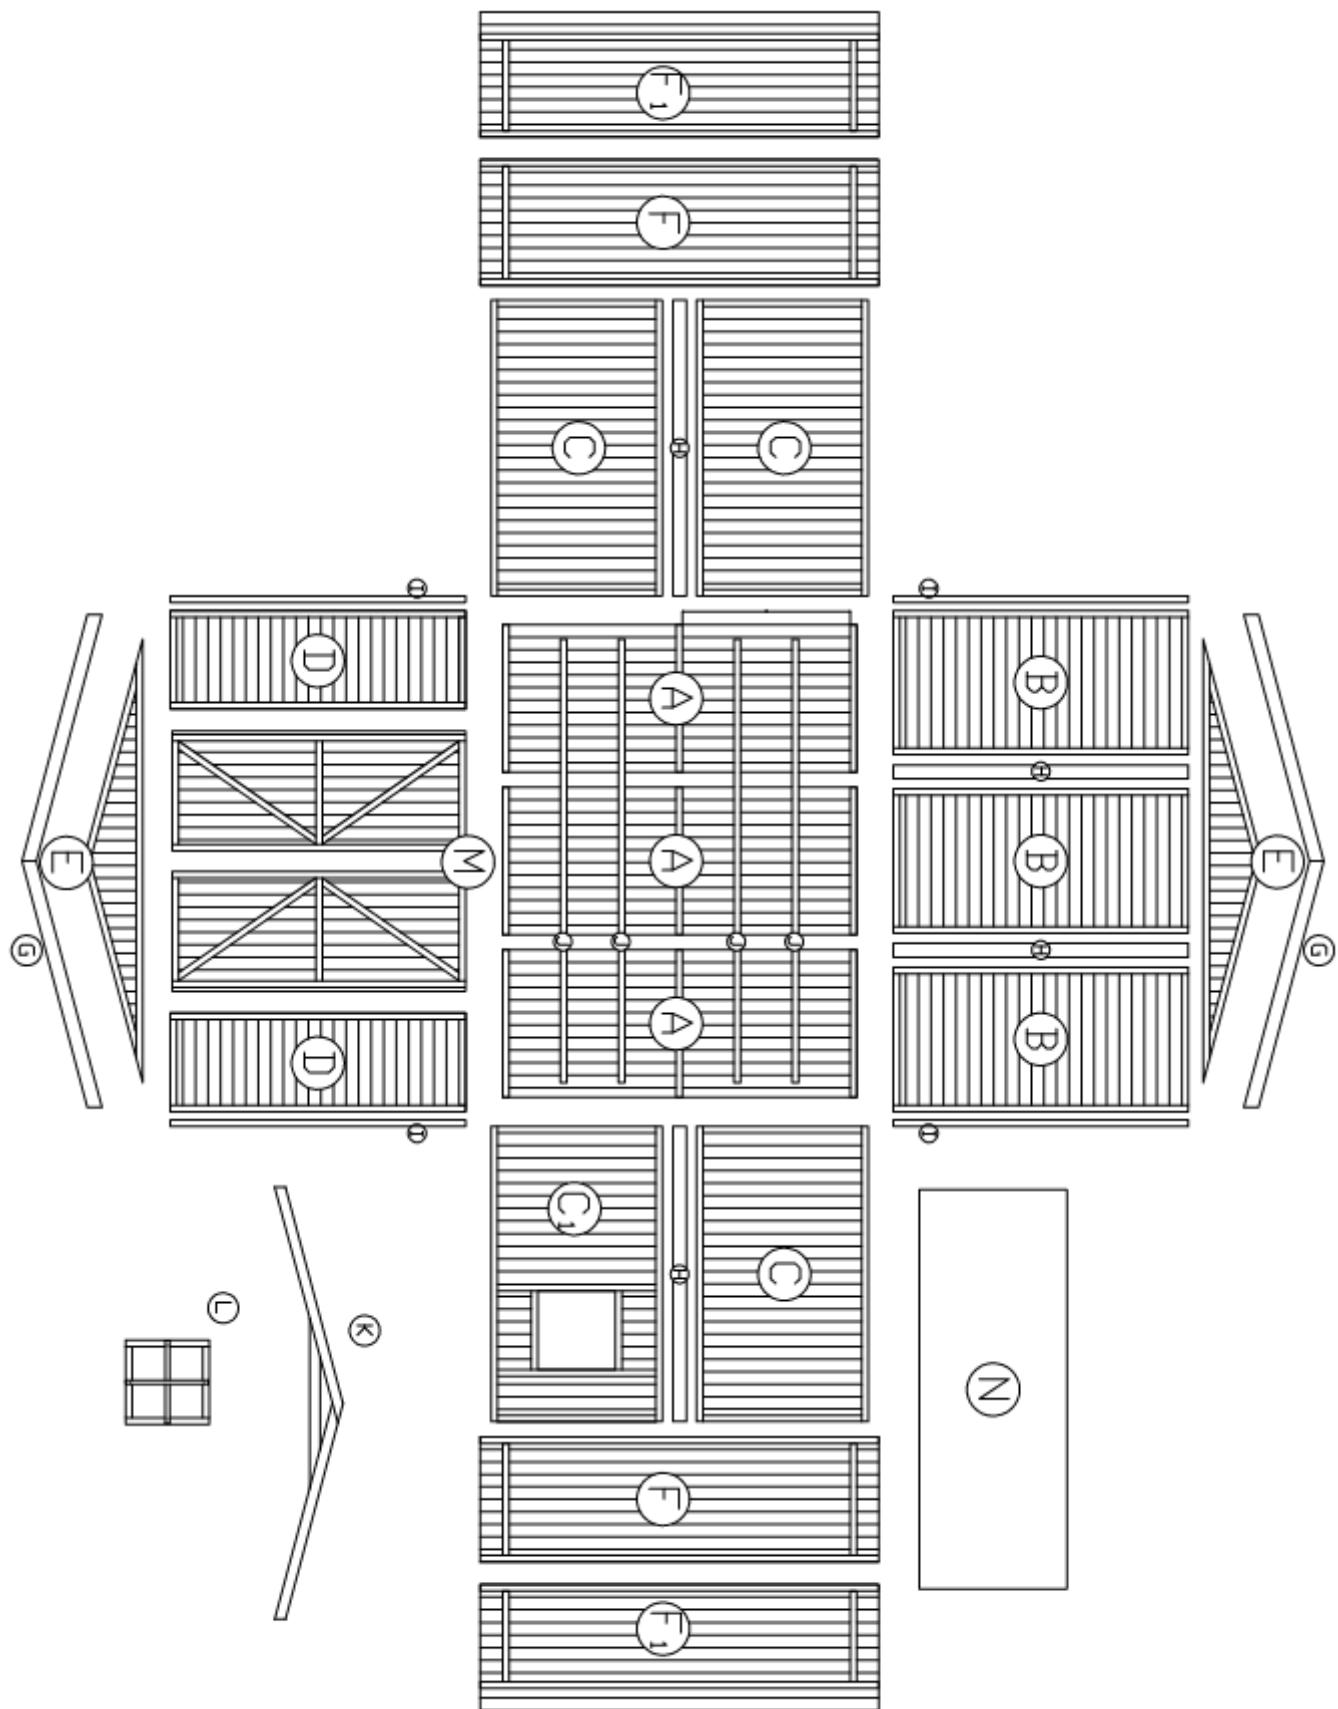

1. place 4 elements (J) under 3 floor elements (A) and fasten each element with 4 x 30 mm screws as shown in the picture

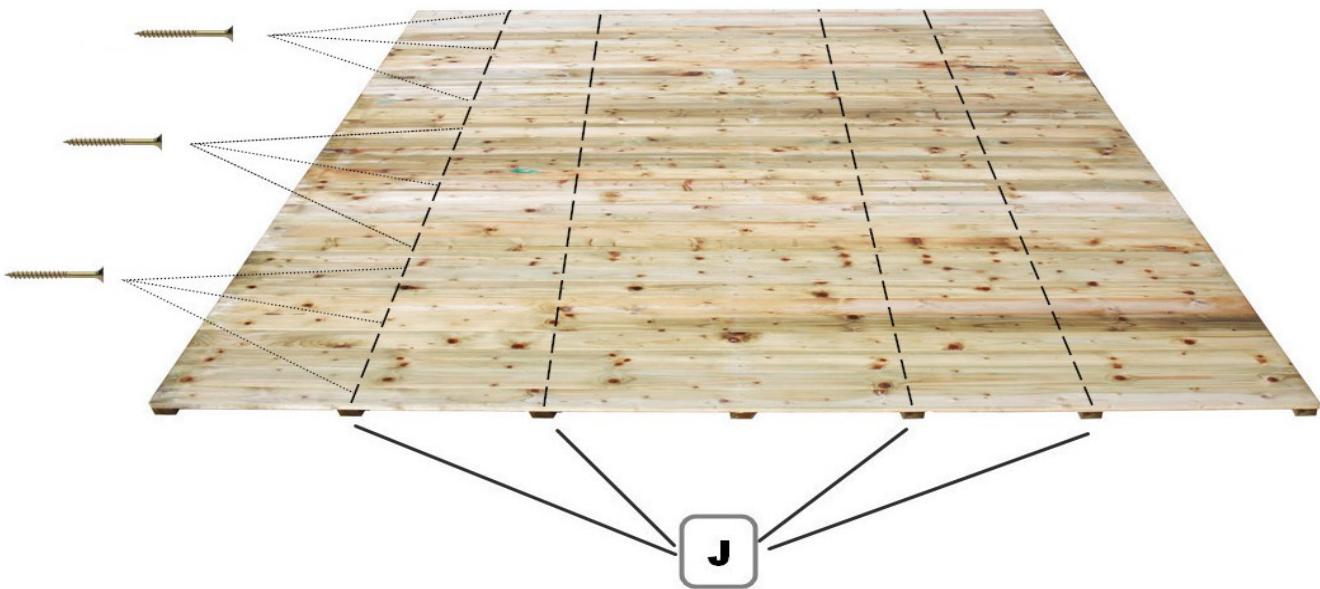


2. screw the wall panels (B) + (C) + (D) to the assembled floor with screws 4.5 x 70 using squared timber in the corners (I)

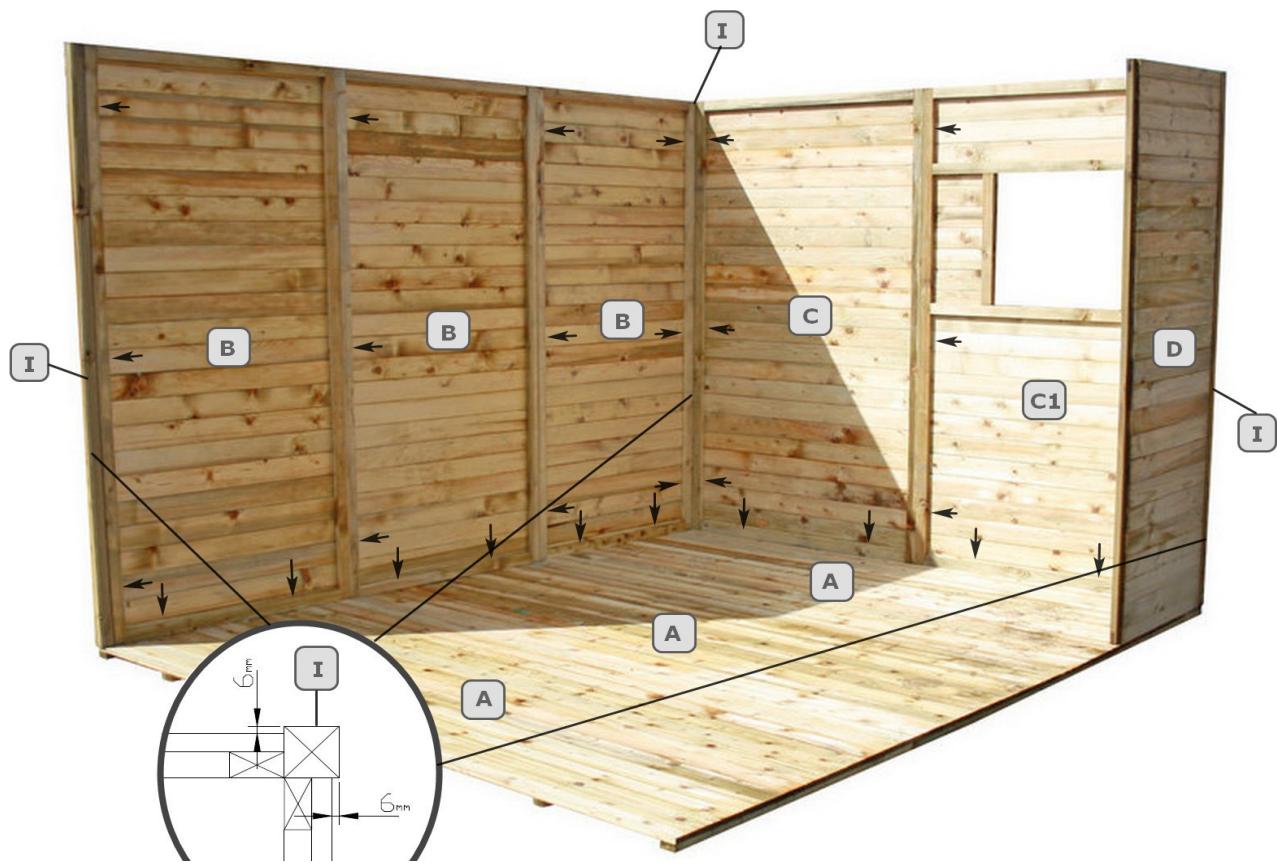


3. all walls should be assembled as described in point 2 with 4.5 x 70 screws



4. The next step is the installation of the roof trusses: elements (E) are mounted on the front and rear walls of the house, screwed from the bottom with 4.5 x 70 mm screws. Then we install internal joists (K) dividing the wall into 3 different parts. Screw the roof truss from the outside with 4.5 x 70 mm screws (as shown in the drawing)

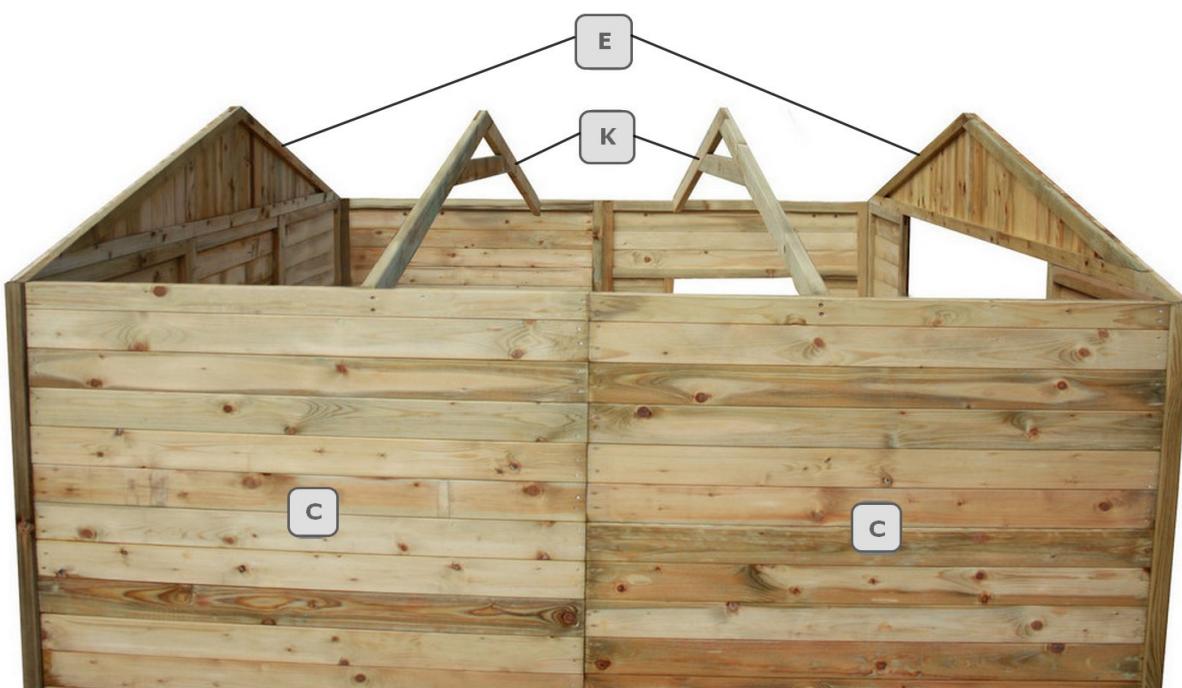

5. we proceed to the assembly of the roofs: we start with the internal roofs (F) which we assemble on the trusses by aligning the roof battens with the wall using 4.5 x 70 mm screws. Then we assemble the outer roof on the slope of the house in the same way as above.

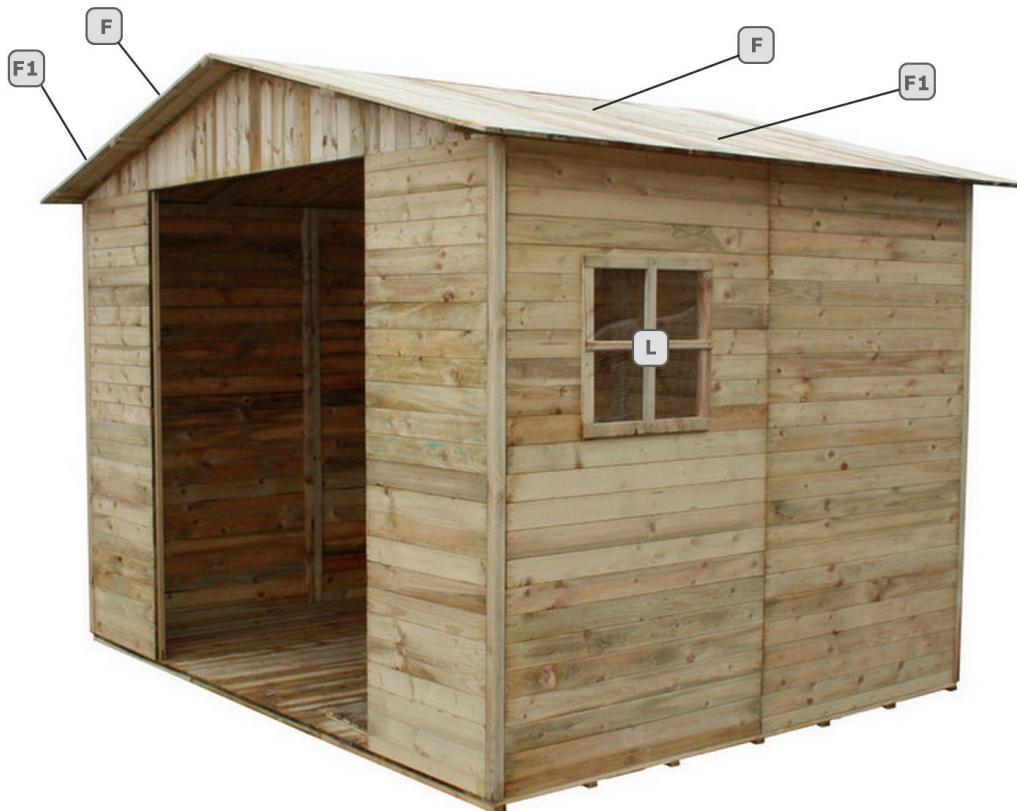

6. the last stage is the assembly of the door (M) with the use of ZT 125 hinges and 4 x 20 mm screws, in the places where the walls join, we install masking panels (H) with 4 x 50 mm screws, wind girders (G) are installed with 4 x 50 screws mm. Remember to install the WRO 70 and WRO 100 bolts. WRO 70 bolts are mounted on one door from the inside using the screws included in the set (assembly of the bolts at the bottom and top of the door as bolts)

