

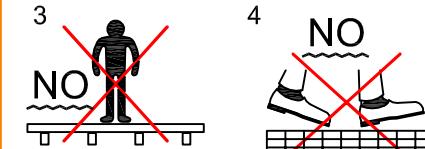
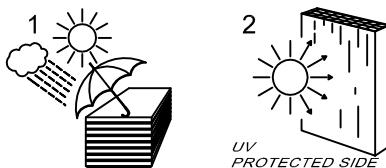


## TECHNICAL RECOMMENDATIONS:


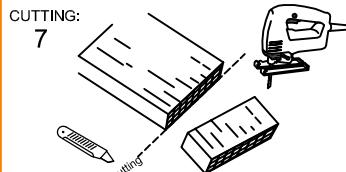


POLYCARBONATE SUFFER THE CHEMICAL ATTACK OF SOME PRODUCTS, THEREFORE:

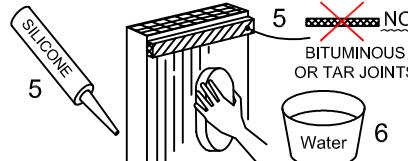


THE SHEETS ARE SUPPLIED TO THE EXACT LENGTH REQUIRED EITHER THERMOSEAL OR SEALED WITH AN ALUMINIUM FOIL TAPE AT THE ENDS

7. CUTTING OF THE SHEETS CAN BE EXECUTED ON SITE BY MEANS OF A HACK SAWING MACHINE (1) OR OF A CUTTER (2). SEAL THE OPEN CELLS AFTER THE CUTTING.

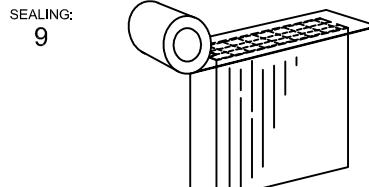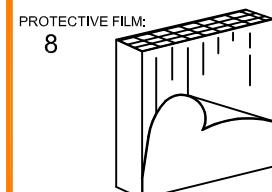

8. TAKE OFF THE PROTECTIVE FILM BEFORE THE INSTALLATION

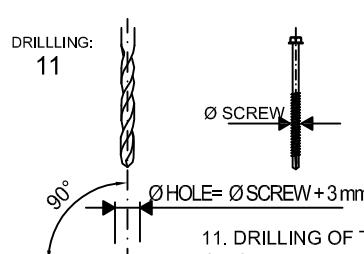

10. PROTECT THE SEALING WITH AN UPPER AND A LOWER PROFILE  
10.a LOWER PROFILES MUST BE DRILLED FOR WATER DRAINING

1. PROTECT THE SHEETS BY THE SUN AND RAIN
2. INSTALL THE SHEETS ALWAYS WITH THE UV PROTECTED LAYER FACING OUTWARDS
3. MULTIWALL POLYCARBONATE SHEETS CAN NOT BE WALKED UPON
4. DO NOT WALK ONTO THE SHEETS AT ANY TIME. FOLLOW SAFETY REGULATIONS AND SAFE METHODS OF INSTALLATION

5. USE ONLY COMPATIBLE CLEAR SILICONE FOR THE SEALING
6. USE ONLY WATER AND MILD DETERGENTS FOR THE CLEANING.

